## EV9618-02 OCS<sup>2</sup> Filter Cartridge Delivers premium quality water for office coffee applications BENEFITS OCS<sup>2</sup> Replacement Cartridge: New and improved Micro-Pure II media with AgION<sup>™</sup> antimicrobial protection inhibits any EV9618-02 potential bacterial growth Provides clear, fresh, premium quality ingredient water for consistently great tasting coffee and beverages Everpure's unique filter blend using activated carbon reduces chlorine taste and odor and other offensive contaminants Saves energy by reducing scale build-up. Proportioned scale inhibitor feed dramatically prevents limescale from forming in brewing equipment 0 Precoat submicron technology reduces dirt and ĩ particles as small as 1/2 micron in size submicronfiltration withmicro-pure II Reduces health contaminants such as asbestos fibers and Cryptosporidium and Giardia cysts Sanitary cartridge replacement is simple, quick and clean. Internal filter parts are never exposed to handling or contamination INSTALLATION TIPS OPERATION TIPS A P P L I C A T I O N / S I Z I N G Never use saddle valve for connection Change cartridges on a regular 6 month For coffee service applications preventative maintenance program Use 3/8" water line For low flow, low volume brewers Change cartridges when capacity is reached or Rated Capacity: 1,500 gallons (5,678L) or 3,000 Install vertically with cartridge hanging down when pressure falls below 10 psi pots Allow 2-1/2" clearance below the cartridge for Service flow rate must not exceed 0.5 gpm easy cartridge replacement Always flush the filter cartridge at time of Flush OCS cartridge by running water through installation and cartridge change filter for three minutes at full flow

## OCS<sup>2</sup> Filter Cartridge

## S P E C I F I C A T I O N S

Overall Dimensions: 10.25"H x 3.25"Diameter

Service Flow Rate: Maximum 0.5 gpm (1.9 Lpm)


Rated Capacity: 1,500 gallons

Pressure Requirements: 10 - 125 psi (0.7 - 8.6 bar), non-shock

Maximum Temperature: 35 - 100°F (2 - 38°C)

No electrical connection required

The contaminants or other substances removed or reduced by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

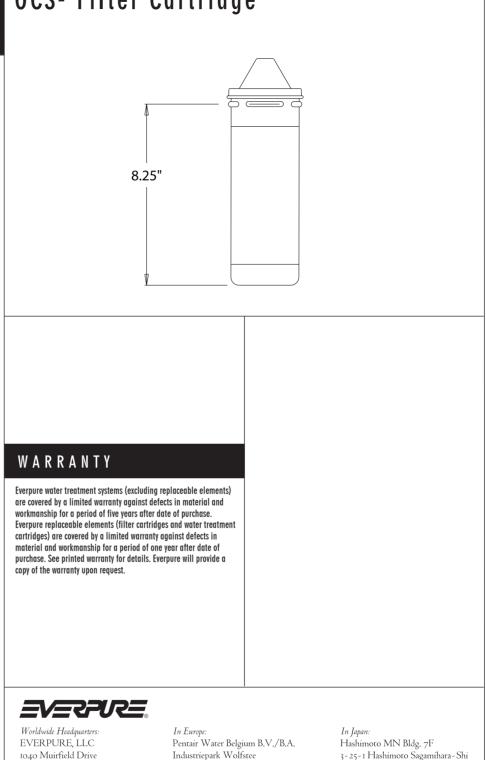

Worldvide Headquarters: EVERPURE, LLC 1040 Muirfield Drive Hanover Park, Illinois 60133 Toll Free (800) 323-7873 Tel (630) 307-3000 Fax (630) 307-3030 http://www.everpure.com In Europe: Pentair Water Belgium B.V./B.A Industriepark Wolfstee Toekomstlaan 30 B-2200 Herentals BELGIUM TEL: +32.(0).14.283.500 FAX: +32.(0).14.283.505 In Japan: Hashimoto MN Bldg, 7F 3-25-1 Hashimoto Sagamihara-Sh Kanagawa 229-1103 JAPAN TEL: 81.(0)42.775.3011 FAX: 81.(0)42.775.3015